



## CONCEALED/IN-GROUND MOUNT



1# Thread the decorative brass acorn nuts all the way onto the brass thread rods until they stop.




2# Now thread the previous assembly through one of the threaded mounting holes on the plaque until the acorn nut is snug against the plaques face. **DO NOT** over tighten, as this may damage your plaque.



3# Repeat steps #1 & #2 for the second mounting hole on the plaque



4# If ground mounted into dirt, simply slowly & carefully push the protruding rods into the dirt. For a more permanent mount push into wet concrete.

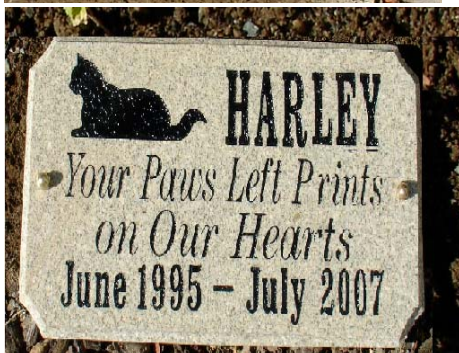

5# To mount onto existing masonry/concrete surface, use a hammer drill or roto hammer to drill into the mounting surface. Then use a high grade two part epoxy to coat the rods & fill the holes. Then push the plaque into position & let dry.