

Number Application:

1. Start by placing the frame on a flat level surface, lens side up.
2. Fold this instruction sheet in half along the dotted line in the center of the page.

Note: There are 2 sets of numbers on either side of the folded line.

- For a 1 digit address: align the center of your number with the “1” on the number layout template.
- For a 2 digit address: align the center of your numbers with the “2s” on the number layout template.
- For a 3 digit address: align the center of your numbers with the “3s” and “1” on the number layout template.
- For a 4 digit address: align the center of your numbers with the “4s” and “2s” on the number layout template.
- For a 5 digit address: align the center of your numbers with the “5s,” “3s” and “1” on the number layout template.

3. Align the marks on the edge of the fold line with the edge of the inside of the address plaque frame and the fold with the bottom of the address plaque frame. It may be helpful to tape the guide to the lens with removable transparent tape (see Figure 1).
4. Using the number layout template as a guide, lay the address numbers dry (Do Not Apply Adhesive at this stage) on the lens. Please note: for some number combinations, you may need to adjust the spacing to achieve a pleasing layout.
5. After you are satisfied with the alignment and spacing on the numbers, lift the numbers, one at a time and apply a bead of adhesive in the middle of the number channel (see Figure 2).

Note: Apply just enough adhesive to make contact with the lenses when the number is in place. Excess use of adhesive may cause oozing.

6. Double check the alignment and spacing of the numbers.
7. Remove number layout template and gently press down on each number to secure them in place. Any excess adhesive pushed out of the edge of the number may be removed with a toothpick or similar device after the adhesive had cured.
8. Lay the frame on a flat surface with number facing up. Allow the adhesive to cure for at least 24-48 hours before installation.

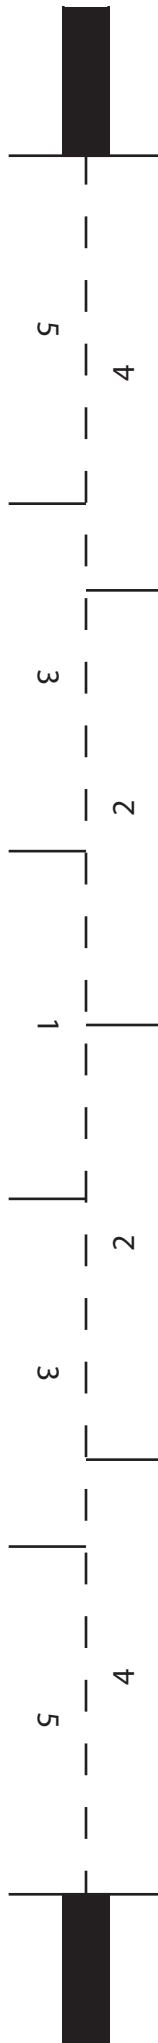


Fig. 1


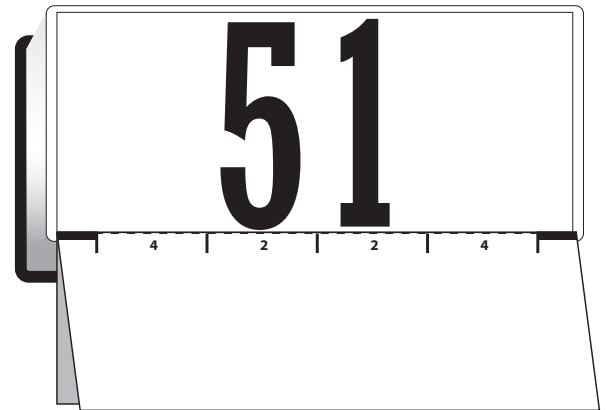


Fig. 2

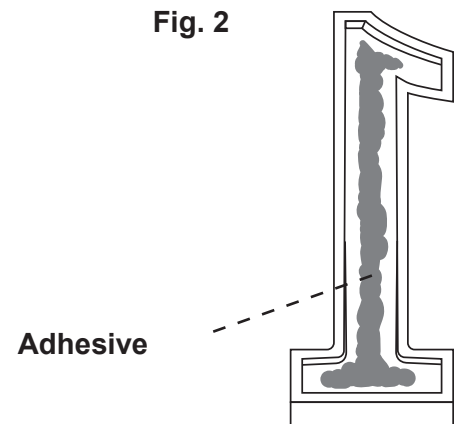

11300 Trade Center Dr., Ste. A
 Rancho Cordova, CA 95742
 1-888-800-0153
 916-273-1576
 qualarc.com